

**To temporarily disable PriorityStart**

1. Disconnect thin black wire (PS to – terminal).

**To completely disconnect PriorityStart**

1. Do step 1 above
2. Remove red cable (PS to + terminal).
3. Reconnect positive cable to + terminal.

**To reactivate battery**

1. Wait 60 seconds
2. Step on brake pedal briefly.

**To get more info about PriorityStart**

[http: www.prioritystart.com](http://www.prioritystart.com) or 1-800-780-8276